


1903 WRIGHT FLYER for PowerUp 4.0

Rear Motor Mount

Material: 5mm paper faced foam board

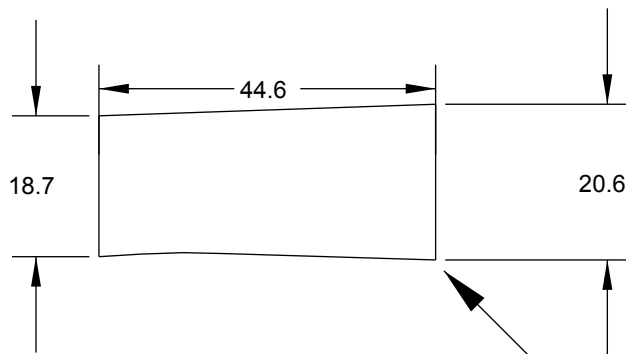

Hot-melt glue onto centreline of lower wing

Rear edge of motor mount approx. 1.5mm from rear edge of lower wing

Cut a 2 x 2mm slot in the top surface for the stem of the PowerUp 4.0 module

Alternatively, laminate 3 pieces of 2mm foam sheet and leave a 2mm deep slot on the top surface